
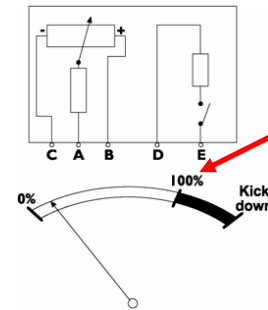


Accelerator pedal potentiometer

The Kick down function is not activated by its own switch but on exceeding a threshold voltage of the accelerator pedal potentiometer.

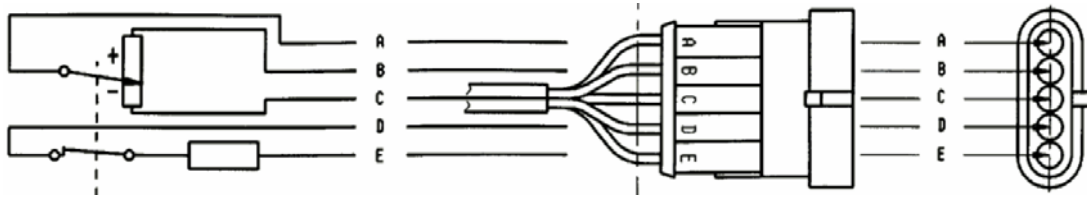

**Kick down
engagement
takes place
at approx. 3.5 V**

Consequently, it is not possible to surely check that the accelerator pedal is working properly with the aid of diagnostic devices.